# TIME-SEQUENCE CONTROLLER

# #29-10200 1 to 10 Outputs



#### **PROGRAM UP TO 10 FUNCTIONS**

This WORKMASTER Time-Sequence Controller (other models available), allows up to ten (10) individually programmed Time-Sequence Outputs.

#### **COMPACT, SOLID STATE RELIABILITY**

The Controller features 100% solid state reliability with integrated circuitry. The board measures  $6-1/4" \times 5-3/8" \times 1-1/2"$ . The Controller is supplied in NEMA 4 enclosure (10" x 8"). Other Non-Hazardous and Hazardous location enclosures are available.

#### **ADJUSTABLE SIGNAL INTERVALS**

Time-Sequence (intervals) signals are adjustable over a range of 16-milliseconds to 2-hours. Special modifications for longer time ranges, and models with complex sequences are also available. LED indication is provided for each Output, and for power ON indication for ease of installation and troubleshooting.

## **STOP FUNCTION (Pressure Switch Sensing)**

The sequence may be stopped at any position, ON or OFF, and then restarted at that position for the programmed set-time.

#### INSTALLATION

- 1. Mount the Controller's enclosure in a convenient location. The mounting orientation of the Controller doesn't affect performance.
- 2. Connect 120V/1Ph/60(50) Hz supply to Terminal H & N w/ NEUTRAL to N, and HIGH to H.
- 3. Connect one wire w/ of each load to Terminals "1" thru "10" as required. The remaining wire (common) is to be connected to Terminal 12.
- 4. Output rating is 3-Amp at 120VAC (maximum).

### **SELECT AND PROGRAM UP TO 10 OUTPUTS**

The Controller's gold program jumper is used to select the number of Outputs from 1 to 10. To change the number of Outputs, <u>carefully</u> pull the jumper from its current socket, and, softly but firmly, reinsert it into the socket position corresponding to the number of Outputs desired (*Note:* each socket closer to the bottom of the board reduces the Outputs by one). Run cycle: #1 "ON", then "OFF"; #2 "ON", then "OFF", and so on to the last selected output (10 available), then back to #1, and continuing.

#### SELECT "ON" AND "OFF" TIME INTERVALS

The ON or OFF time is adjusted by simply rotating the Potentiometer to the appropriate setting. If the adjustment does not provide the needed time period, the Controller can be easily modified by adding or changing one or two components. A TABLE showing the available Time Ranges (TR) and the components required to obtain a needed TR is shown on the Field Connection Diagram on the reverse side of this sheet.



The Controller regulates time and sequence combinations. Two timers are on the PC-board: one for the OFF time period; the other for the ON time period. The Time Ranges (TR or T-Range), for each are independently adjustable, using the PC-board mounted Potentiometers marked OFF and ON.

The PC-board is shipped with TR-1 (16 to 600 milliseconds) installed for the ON time period; and TR-7 (2 seconds to 2 minutes) installed for the OFF time period. If these factory-set T-Ranges don't meet the specific application requirements of the job, different T-Ranges can be selected. The TABLE below lists the different T-Range settings under "**TR#**" and their respective time periods under "**TIME RANGE**".

Lengthening the OFF time period requires that a capacitor be connected across the A and C Terminals on the PC-Board.

If you choose TR-8, TR-9, TR-10, so that the maximum OFF time period is: 10-min (f/ R-8); 20-min (f/ TR-9); or 45-min (f/ TR-10), you'll need to add a capacitor across the A and C Terminals on the PC-board. The TABLE below lists the value of the Capacitor, in microfarads, under "**C**".

Lengthening the ON time period requires that a capacitor be connected across the B and C Terminals on the PC-board.

If the capacitors used to lengthen the T-Range are polarized type (can be determined by looking at the capacitor, usually, only the Negative "-" will be marked); the Negative should be inserted into Terminal C.

On a voltmeter, this unit shows a constant output when no load is placed on the output. To simulate a test load, a solenoid, a motor contactor, or a 33K-ohm resistor will be sufficient load (120 VAC output). If using a Resistor, it must have a minimum of a 1/2-watt power dissipation capability.

**DANGER:** As with every electrical installation, GROUNDING the NEMA box is mandatory; BONDING the hinged door is also an important, safety practice, so a bonding stud has been provided the inside, lower-right corner of the door.

TOVDE CAPACITOR SIZE FOR TIME RANGE						
TR#	TIME RANGE					С
1	16	Millisecs	to	600	Millisecs	.1
2	30	Millisecs	to	1.2	Seconds	.2
3	.1	Second	to	6	Seconds	1
4	.2	Second	to	12	Seconds	2.2
5	.3	Second	to	20	Seconds	3.3
6	1	Seconds	to	60	Seconds	10
7	2	Seconds	to	2	Minutes	22
8	15	Seconds	to	10	Minutes	100
9	30	Seconds	to	20	Minutes	220
10	1	Minutes	to	45	Minutes	470
11	2	Minutes	to	1.5	Hours	1000
12	3	Minutes	to	2	Hours	1500

EXTERNAL SWITCHES OR CAPACITORS

в

ON

TIME

ADJUST

C

LOADS 1-3 AMPS 1 2 3

46VIDC CARACITOR SIZE FOR TIME RANCE

• GOLD PROGRAM JUMPER SHIPPED

• TO REDUCE OUTPUTS, MOVE THE

JUMPER DOWN ONE POSITION. • FOR 10 OUTPUTS - REMOVE THE

IN Nº 9 POSITION.

JUMPER.

CLOSE A TO STOP CYCLE WHILE OFF

CLOSE B TO STOP CYCLE WHILE ON

000000000

POWER TERMINALS

70000000000000

4 5 6 7 8 9 10 11 12

POWER ON LED

FUSE 3 A FUSE 1/8 A

H N

120 VAC 50/60 HZ

INC.

С

OFF TIME ADJUST

OUTPUT ON LED'S

TERMINALS



5/16" Dia.  $10^{\circ}$  11-1/2"  $10^{\circ}$   $10^{\circ}$ 1

